



HMS Sealing Cap

Function: Used to protect the unused trunk connection ports(usually for the last one HMS Trunk Connector) on the bus cable.