



HMS Extension Connector

Function: Used to extend the bus cable when the distance between two micro-inverters exceeds the length of the standard specification cable.