


Main accessories display and function introduction



Function1:
tighten/loosen nuts



Function2:
remove a microinverter
from the AC Trunk

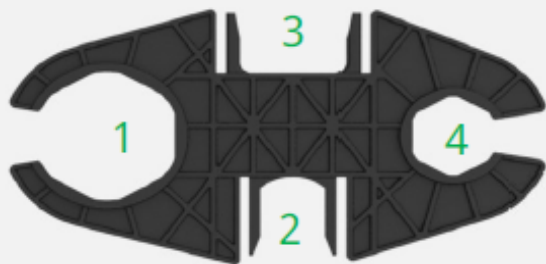

HMS Disconnect Tool



Function3:
disassemble
connectors on the
AC Trunk



Function4:
tighten/loosen nuts
of field connector